



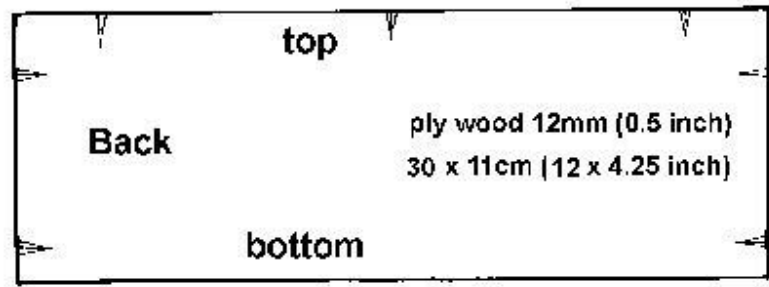


This is the drawings for the armrest based on information obtained from Uwe Geissler, Andreas Knobl, Frida Herbold and many others in Germany. Use plywood.

For those who know Joerg Kugelmeier, he made several other versions of the armrest: here is the link: https://www.porzellanmalerei.com/seite_145.htm


This armrest helps to keep your back straight and because of your entire forearm and hand is resting your hand does not tend to shake and it is so much easier to paint a straight line without the shakes or pressing your little finger on your piece.

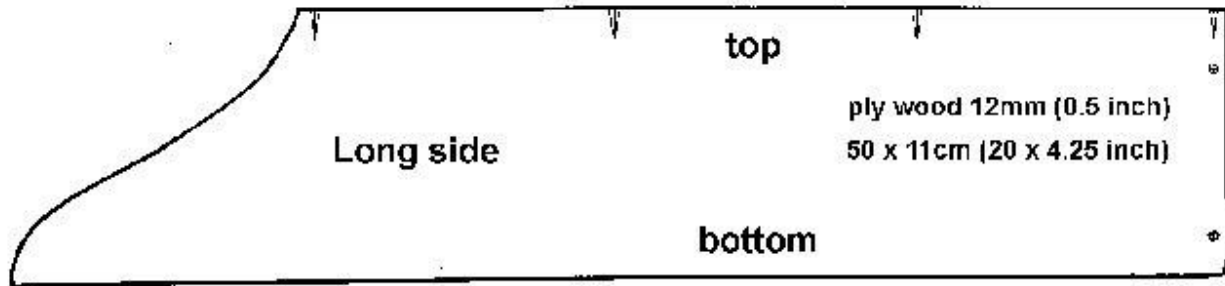

Total needed ply wood 12 mm (0.5 inch)
35 x 11 cm (6.5 x 4.25 inch)

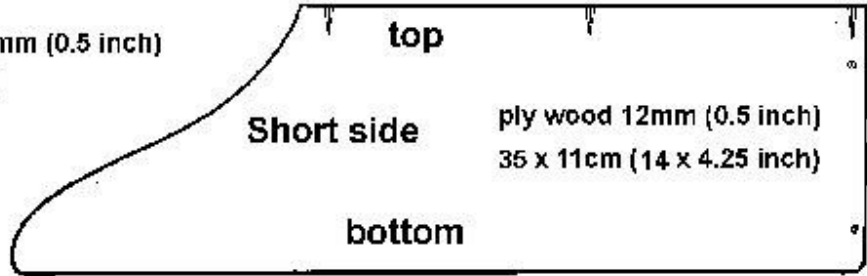

**Bottom plate is rectangular
55 x 40 cm (22 x 16 inch)
Ply wood 8 mm (0.3 inch)**

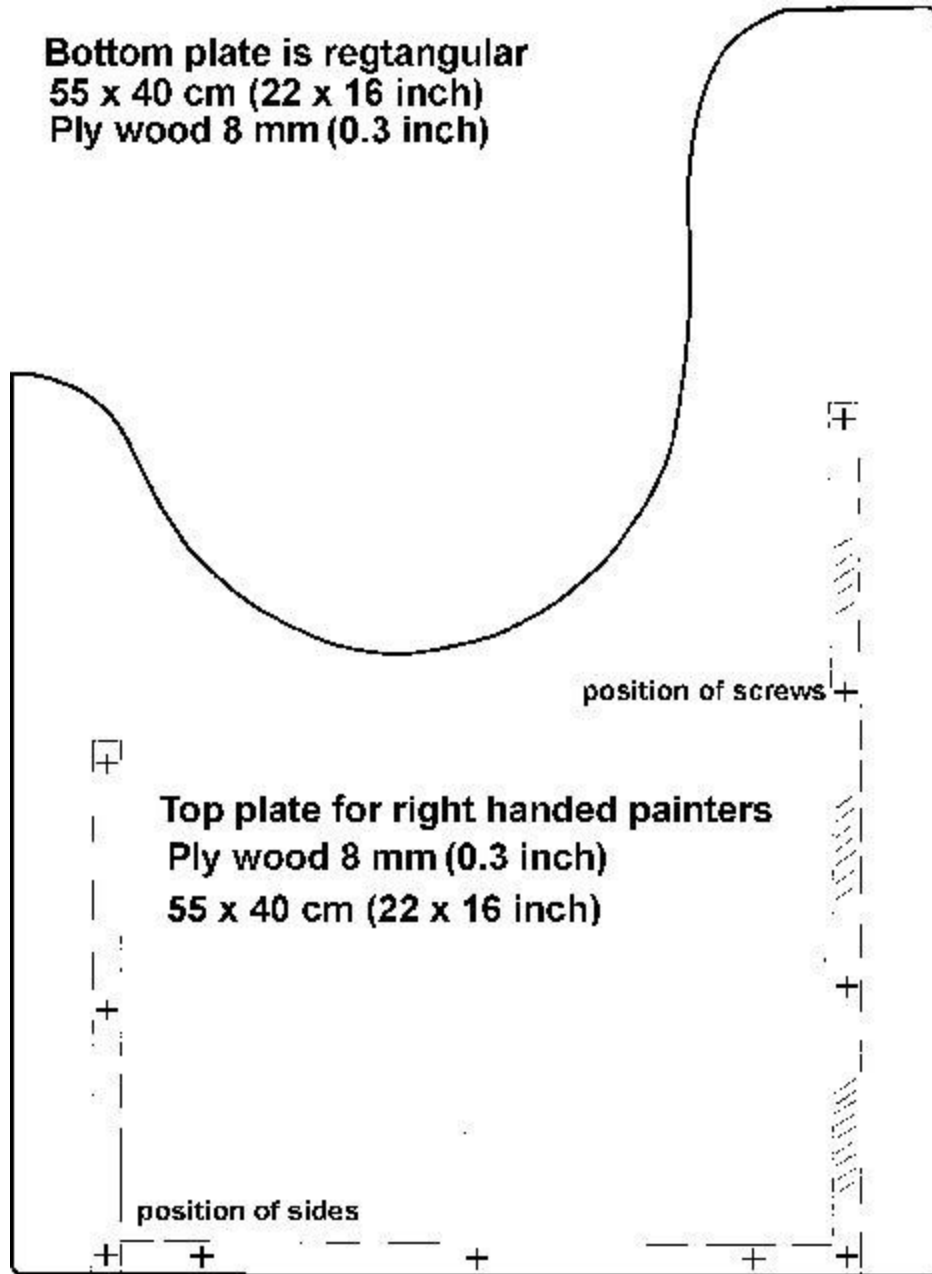

**Top plate for right handed painters
Ply wood 8 mm (0.3 inch)
55 x 40 cm (22 x 16 inch)**

position of screws +

position of sides